

# Installation and Operating Instructions for MODEL 375 RECORD-A-HORN

Your purchase of a WOLO horn is a perfect choice to compliment your vehicle. Our horns are manufactured with the finest of materials. Each horn is bench tested before it is packaged to assure workmanship and quality, so you will have many years of reliable service. If you require assistance installing your new Wolo horn, our technicians are available to answer your questions, Monday through Friday from 8 AM to 4 PM EST 1-888-550-HORN (4676).

**IMPORTANT:** THIS HORN SHOULD NOT BE USED AS A REPLACEMENT FOR VEHICLE ORIGINAL EQUIPMENT HORN. ADDITIONALLY, IT IS NOT TO BE USED AS A WARNING DEVICE. MODEL 375 RECORD-A-HORN IS FOR OFF THE ROAD AND SHOW USE.

## MOUNTING CONTROL BOX

1. Select a mounting location in the dashboard area that will not interfere with air bags or drivers vision.
2. Using the double-sided foam adhesive tape provided, mount the keyboard to selected location. Make sure that mounting surface is free from dust, wax etc. A clean surface is necessary so that double-sided tape will hold properly. **IMPORTANT: ADHESIVE HOLDING POWER BECOMES MAXIMUM IN ABOUT 24 HOURS. LIMIT MOVING OR PUTTING PRESSURE ONTO THE CONTROL BOX UNTIL THEN.**

## MOUNTING SPEAKER

3. Select a convenient location in the engine compartment that is dry and safe from the engines exhaust manifold heat. Always face the speaker in a downward position. This will help prevent water from entering into the speaker. Using the speakers mounting bracket as a template, mark hole locations (3) and drill using a 1/8 inch drill bit. Secure speaker with self tapping screws provided (3). Make sure that the speakers opening is not blocked by any components which could reduce its loudness.

## WIRING


4. Insert the power wire plug into the control box. The plug can only be pushed into the control box with the tabs facing upward. See Fig. A.
5. **TWIN BROWN WIRES** are connected to the speaker in the engine compartment. Route wires through fire wall to speaker. Connect either wire to one of the speaker wires. Then connect remaining wire to other speaker wire.
6. **RED WIRE**, is connected to the fuse-block or a under dash wire that has power (+) 12 volts when the ignition is on. The 3-amp inline fuse provided must be used to protect the vehicle.
7. **BLACK WIRE**, is grounded. Secure wire under a bolt in the dashboard area, make sure that the METAL surface around the bolt is clean of rust and paint to make a good electrical connection.

## TESTING

8. Make sure all wires are secured and connections are properly taped.
9. Put the vehicles ignition on to power your RECORD-A-HORN during testing.
10. Turn on the RECORD-A-HORN by rotating the volume control clockwise. The volume control is located on the right side of the control box. The green LED over the play button will turn on.

## TESTING

**Any message recorded into the Record-A-Horn will remain in the horn until you decide to replace it with a new message. The message will not be lost if you turn off the horn or the horn is disconnected from its power source.**

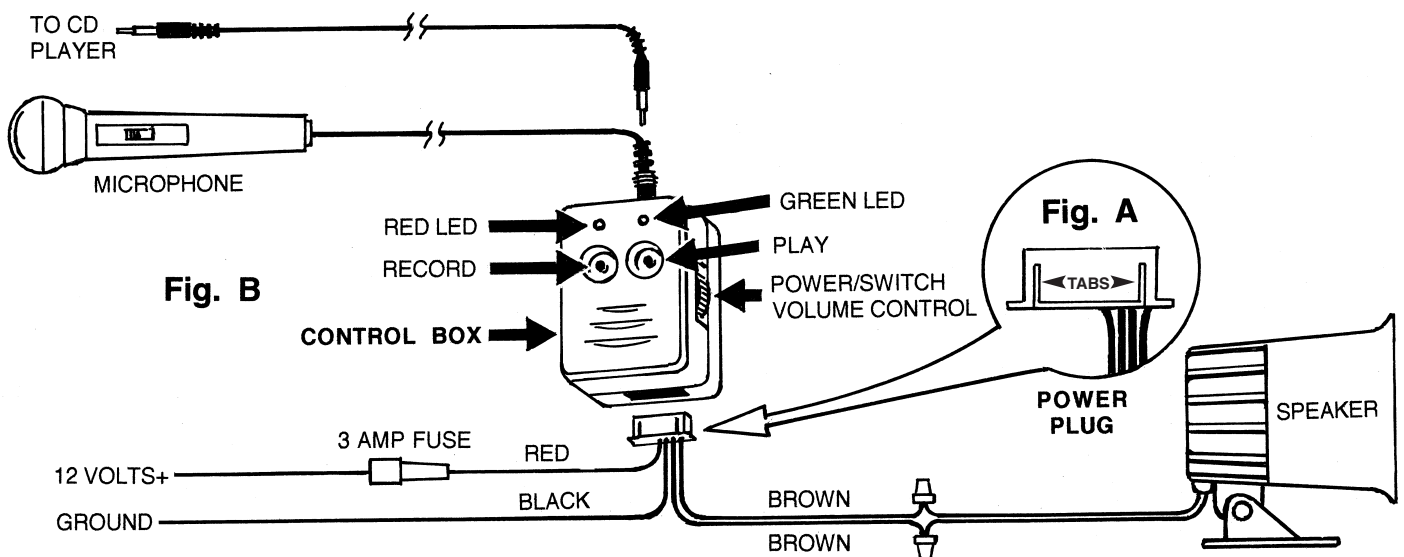

## **USING MICROPHONE (Refer to Fig. B)**

11. Connect microphone jack into the female outlet located at the top of the control box.
12. Position the microphone switch to the on position.
13. For best recording quality the sound must be a smooth frequency response.
14. Place the ball of the microphone 2 to 3 inches from sound being recorded such as a person's mouth.
15. Press and hold the RECORD button. When the red LED light turns on, record up thirty (30) seconds of favorite message. Release the RECORD button when message has been completed.
16. Play back the message anytime by pressing the PLAY button. The volume is adjustable by turning the control on the right side of the control box.
17. If message is not clear you should reposition microphone or adjust audio level. Try re-recording message by following step number 15.

## **RECORD FROM CD PLAYER**

18. Using the wire jack connector provided, plug one end into the female outlet located at the top of the control box.
19. The other jack is plugged in the CD player's headphone outlet.
20. Press the RECORD button. When the red LED light turns on, record up to thirty (30) seconds of favorite message. Release RECORD button when message is completed.  
**IMPORTANT:** Make sure the CD player volume control is in a low position.
21. Play back message anytime by pressing the PLAY button. The volume is adjustable by turning the control on the right side of the control box.
22. If message is not clear you should adjust audio level of the CD player and then try re-recording message by following step number 20.

## **WARRANTY**

Wolo Manufacturing Corporation ("Wolo") warranties to the original purchaser, for three months from the date of purchase, that this product is free from defects in workmanship and materials. If there is such a proven defect, Wolo, at its option, will either repair or replace the item free of charge, if it is returned to Wolo within three months from the date of purchase together with proof of purchase as described below. Wolo reserves the right to inspect any defect prior to settling any warranty claim by repair or replacement. This warranty is limited as above provided and Wolo will not be responsible for fire or other casualty or accident, due to neglect, abuse, abnormal use, modifications, faulty installation of this product, or natural causes.

ANY EXPRESSED WARRANTY NOT PROVIDED HEREIN IS EXCLUDED AND DISCLAIMED. THE IMPLIED WARRANTIES OF MERCHANTABILITY AND OF FITNESS FOR A PARTICULAR PURPOSE ARE EXPRESSLY LIMITED TO A TERM OF THREE (3) MONTHS. UNDER NO CIRCUMSTANCES SHALL WOLO BE LIABLE TO PURCHASER OR ANY OTHER PERSON FOR ANY SPECIAL OR CONSEQUENTIAL DAMAGES, WHETHER ARISING OUT OF BREACH OF WARRANTY OR OTHERWISE.

To obtain warranty service, return the product prepaid, and include the original bill of sale showing the date of purchase. Provide with the return a brief description of the problem. Also, include with the return a check or money order in the amount of \$10.00 to cover return shipping. Mail to:

**Wolo Manufacturing Corp. • One Saxwood Street, Deer Park, NY 11729**  
**Attn: Warranty Service**  
**E-mail: tech@wolo-mfg.com**