

**Instructions
for**



**ILLUME 1
1500 Watt
Portable
Halogen
Flood
Light**

**MODEL
5150**

IMPORTANT WARNING:
**Read all instructions before assembling
and using light**

This light must only be used outdoors and basic safety precautions must always be followed so to reduce the risk of personal injury, electrical shock and fire. Basic safety precautions include the following:

1. When using an extension cord, use only three wire outdoor extension cords that have a three prong plug. Use only power receptacles that accept the three prong plug.
2. Use light only with extension cords approved for outdoor use. Proper extension cords will be marked with one of the following type identification's: SW, SW-A, SOW, SOW-A, STW, STW-A, STOW, STOW-A, SJW, SJW-A, SJTW, SJTW-A, SJTOW & SJTOW-A
3. When using the light in wet locations, ground fault circuit interrupter (GFCI) protection should always be provided on the circuit(s) or outlet(s).

Halogen Work light Safety Instructions
READ ALL INSTRUCTIONS – WARNING:

This light fixture must only be used outdoors and basic safety precautions must always be followed to reduce the risk of fire, electric shock, personal injury. Basic safety precautions include the following:

- This light fixture is not intended, designed or approved for use in potentially dangerous locations such as explosive or flammable atmospheres.
- Never use light around flammable or volatile fluids such as gasoline.
- Never use light inside dwelling.
- Keep light fixture away and out of reach of children, because the light fixture gets hot.

- Do not look directly at the lighted bulb or point the light directly at a person's eyes, because the bright light could damage sensitive eyes.
- If your skin feels warm, you are too close to the light fixture.
- This light fixture gets hot. Always keep light 24 inches away from combustible materials such as paper cardboard, cloth, rags and etc. to prevent fire.
- Never operate this light fixture if the safety glass is damaged or missing.
- Never operate this light fixture if the metal safety grill is not in place.
- Never touch the light fixture while standing in water.
- Never touch the light fixture while standing on wet or damp surfaces.
- Never use this light fixture around swimming pool or hot tubs.
- To reduce the risk of electrical shock, always plug this light into properly grounded three (3) wired outlet.
- Never remove the ground wire or three (3) prong ground plug from the light fixture.
- Always use a U.L. listed three (3) wire grounded power cord with a wire gauge capable of handling the current load.
- When the bulb in this light fixture requires changing, always wear safety glasses, remove plug from power source and allow enough time for light fixture and bulb to cool.
- Before plugging the light into a power source, always make sure the safety glass front cover is secured to the light fixtures housing.
- Never use any bulb other than **J118 110-130 volt** 150 watt type. If the wrong bulb is used the light fixture could get too hot and fire could occur.

WARNING: Failure to observe the above safety instructions could result in electric shock, personal injury and other hazards.


BULB INSTALLATION


The life of the bulb will vary due to voltage surges and the handling of the light fixture. Therefore, the bulb is not covered by any factory warranty. For maximum life of the bulb, it is recommend that the light fixture be kept in a horizontal position. Never use any bulb other then **J118 110-130 volt 150 watt** type. If the wrong bulb is used the light fixture could get too hot and fire could occur.

1. If the light fixture was in use and the bulb burns out, allow enough time so that light fixture cools before you attempt to change bulb.

2. **IMPORTANT:** Always unplug the light fixture from the outlet or power source before attempting to change the bulb. This will protect the person changing the bulb from potential life threatening electrical shock.

3. Always wear safety glasses when replacing the bulb.
4. Remove the wing nut that secures the hook and rubber coated handle to the light. See fig. A.
5. Remove hook and rubber coated handle.
6. Remove the screw that secures the lens cover to the light's housing. See fig. B

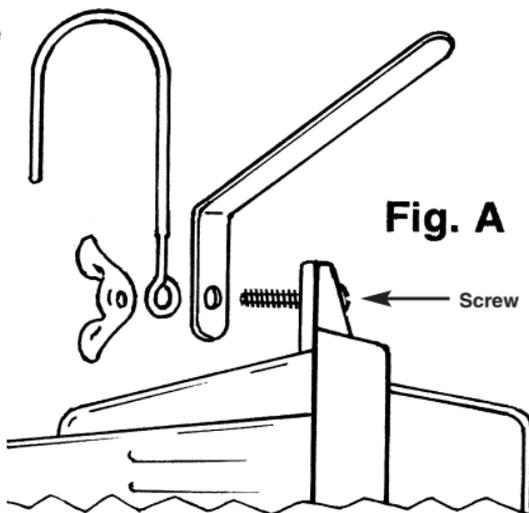

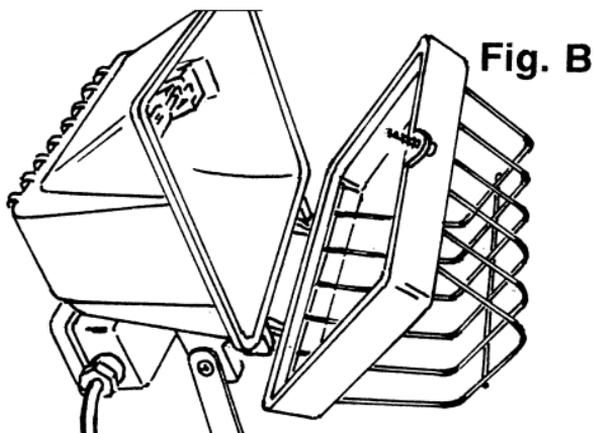

7. The lens cover will now open. To remove the old bulb, simply push the bulb gently to the right until the left hand side of the bulb slides out of the electrical socket.
8. Never touch the new bulb with your hands. The oil on your skin will damage the bulb and greatly shorten the life. When installing the new bulb use clean gloves or use a cloth to avoid touching the bulb and getting oil from your hands on the bulb. If the bulb does make contact with your skin – you will need to clean the bulb with alcohol to remove any oil residue before use. See fig. C.
9. Carefully close the front cover and tighten screw – be careful not to over tighten.
10. Put the rubber coated handle and hook back into position on the light and secure in place with the wing nut.
11. Your light fixture is now ready for use. You can now plug in your light fixture. If the light fixture does not work, push in on the on/off switch; the switch may be in the off position. For safety, always be sure to use a grounded outlet, which will mate with the three (3) prong plugs.

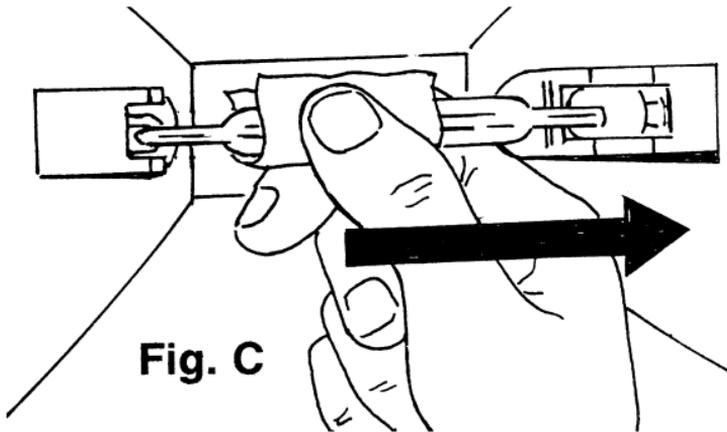


Fig. C

ASSEMBLY INSTRUCTIONS FOR MOUNTING SPRING CLAMP

Do not assemble light while plug is connected to a power source. Secure the bracket of the spring clamp to the light using the plastic thumbscrew. See fig. D

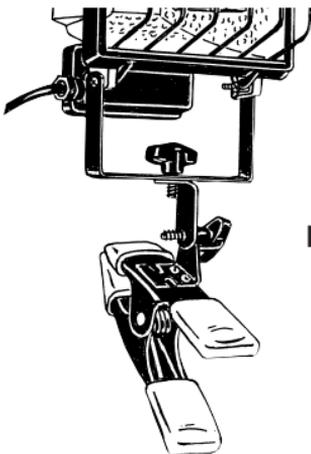


Fig. D

ASSEMBLY INSTRUCTIONS FOR WIRE SAFETY GRILL

**WARNING: GRILL MUST BE INSTALLED ON WORKLIGHT
BEFORE USING.**

Push the flat prongs of the metal grill against the glass until it slides under the top of the metal frame holding the glass. When the prongs are in position under the top frame, squeeze the grill and slide the prongs of the metal grill into the slots located in the bottom of the metal frame. Check to make sure all four prongs of the metal grill are locked into the frame securely before using the light fixture.

WARNING This light fixture GETS VERY HOT!

Never use this light fixture unless the metal safety grill is in place. The safety metal grill provides protection in the event that the light fixture tips over as well as protecting against a person touching the hot safety glass.

Never use this light fixture around children or indoors. Never use around combustible materials or in a flammable atmospheres such as gasoline, flammable paints, flammable vapor and etc.

If you need help with your Wolo halogen light, our technicians are available to answer your questions, Monday through Friday from 9 AM to 4 PM EST 1-888 550-4676.

Warranty Of Light Fixture Ninety (90) Days

(Does not apply to halogen bulb,
which has no factory warranty)

WARRANTY

Wolo Manufacturing Corporation (“Wolo”) warranties to the original purchaser, for three months from the date of purchase, that this product is free from defects in workmanship and materials. If there is such a proven defect, Wolo, at its option, will either repair or replace the item free of charge, if it is returned to Wolo within three months from the date of purchase together with proof of purchase as described below. Wolo reserves the right to inspect any defect prior to settling any warranty claim by repair or replacement. This warranty is limited as above provided and Wolo will not be responsible for fire or other casualty or accident, due to neglect, abuse, abnormal use, modifications, faulty installation of this product, or natural causes.

ANY EXPRESSED WARRANTY NOT PROVIDED HEREIN IS EXCLUDED AND DISCLAIMED. THE IMPLIED WARRANTIES OF MERCHANTABILITY AND OF FITNESS FOR A PARTICULAR PURPOSE ARE EXPRESSLY LIMITED TO A TERM OF THREE (3) MONTHS. UNDER NO CIRCUMSTANCES SHALL WOLO BE LIABLE TO PURCHASER OR ANY OTHER PERSON FOR ANY SPECIAL OR CONSEQUENTIAL DAMAGES, WHETHER ARISING OUT OF BREACH OF WARRANTY OR OTHERWISE.

To obtain warranty service, return the product prepaid, and include the original bill of sale showing the date of purchase. Provide with the return a brief description of the problem. Also, include with the return a check or money order in the amount of \$10.00 to cover return shipping. Mail to:

Wolo Manufacturing Corp.
One Saxwood Street, Deer Park, NY 11729
Attn: Warranty Service
E-mail: tech@wolo-mfg.com

© 2005 Wolo Mfg. Corp All Rights Reserved.